
Table of Contents

Table of Contents	1
1 Out Look Description	2
2 Power Button Usage.....	3
3 Touch-Screen Navigation	3
4 Using microSD Card	3
5 Getting Started	3
7 Screen Lock	5
8 Pre-loaded Applications	6
9 Desktop menu functions	8
10 Application Management	10
11 Phone	12
12 Message	12
13 Contacts	13
14 Qianxun Player.....	13
15 CLOCK.....	14
16 MARKET.....	16
17 BROWSER	17
18 CALENDAR.....	19
19 CAMERA.....	21
20 CALCULATOR	22
21 EMAIL	23
22 EXPLORER	25
23 MY MUSIC.....	26
24 Vedio.....	28
25 GALLERY.....	29
26 ACCOUNTS	31
27 Gmail.....	32
28 Wi-Fi.....	34
29 HDMI	36
30 Settings.....	37

1 Out Look Description



- ① Volume Plus
 - ② Volume Minus
 - ③ Power Key
-

2 Power Button Usage

Turn On: Press the power button and hold for 2 seconds. Before doing this, you should make sure that On/off button is on.

Turn Off: Press the power button and hold for 2 seconds → **tap** Power off → tap **OK**

Sleep Mode On/Off: Press & release the power button quickly to turn sleep mode on and off.

3 Touch-Screen Navigation

The touch-screen allows for quick, easy and convenient navigation for all applications.

Throughout the User Guide, you are instructed to use the following tap or touch navigation methods:

Tap: quick tap & release on an item on the screen.

Finger slide: touch & slide your finger across the screen and then release.

Touch & hold: touch and hold in place approx 2 seconds, and then release to display an options window.

Note:

To avoid scratching or crushing, do not place objects on the touch screen surface.

4 Using microSD Card

- Insert your card into the microSD slot until it clicks into place. When ready for use, it's OK.
- Remove microSD Card
- Close all applications or documents which have been opened on the card. Press Menu → Settings → Storage → Unmount SD card → OK.

Note:

Don't insert and remove the SD card repeatedly in a short time, as this may cause damage to the card.

5 Getting Started

Charge the device

Note:

You cannot charge the battery using the USB cable.

You can use the device while the battery is charging, although the charging time is longer when operating and charging at the same time.

- Plug the power adapter into an electrical wall outlet named DC, and then connect to the device to fully charge the battery before use (approx. 4hour).
- While charging, the battery indicator light is red. When fully charged, the battery indicator light is off

Turn the device on

Press the power button and hold for 2 seconds.

Start Wi-Fi Network


- Turn on Wi-Fi

Since many features require a Wi-Fi connection, we recommend you set up your Wi-Fi network now.

Press Menu → Settings, → Wireless & network.

Check Wi-Fi to turn on.

- Connect to Wi-Fi

The device automatically scans and lists all local Wi-Fi Network found. A  indicates secure networks that require login name/password to connect.

 
1、Tap the desired network to which you want to connect, → enter the Network Password if applicable, → tap Connect.

2、Tap back key to return to the Home screen.

Note:

If your Wi-Fi network is set as hidden, it won't be found by the auto scan. Tap Add Wi-Fi network and follow the prompts to add your network

6 Launcher

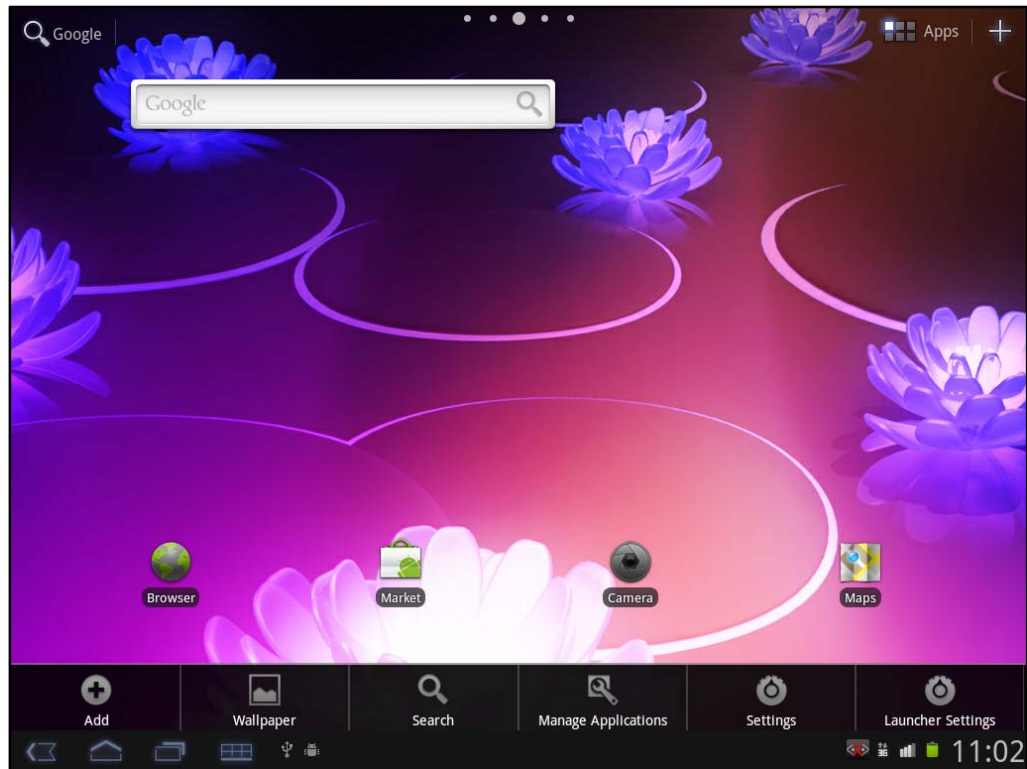


① ② ③ ④



⑤⑥⑦ ⑧

- ① Backspace
- ② Home
- ③ Display the program is running
- ④ Menu
- ⑤ 3G icon
- ⑥ Signal icon
- ⑦ Battery
- ⑧ Time

 7 Screen Lock

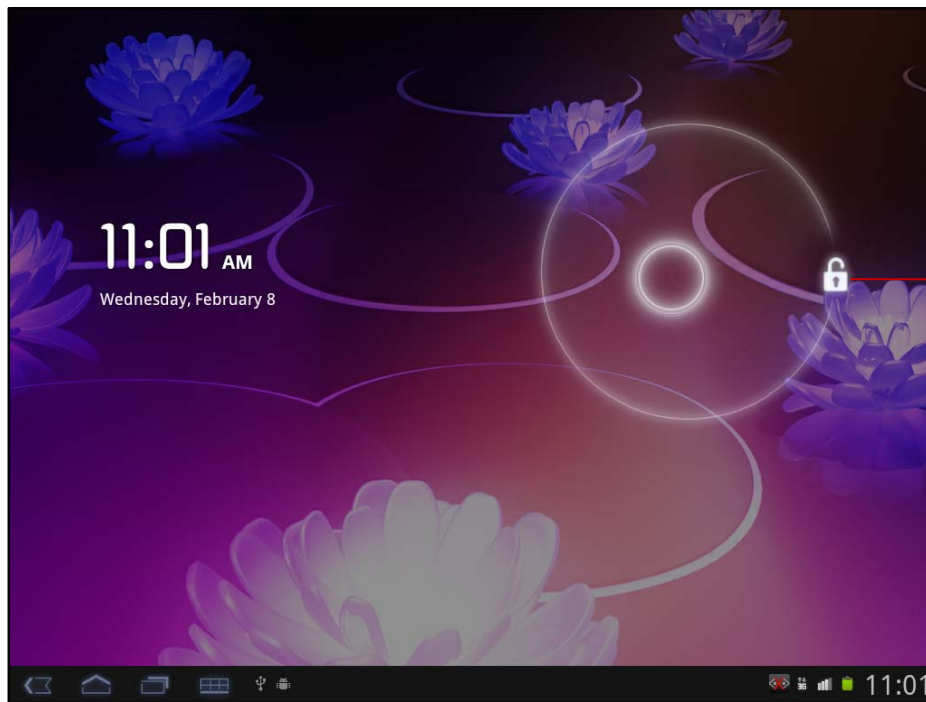Can be set to automatically lock screen or quickly press the power button to manually lock screen.
Lock screen displays the following:



1. Pressing , drag to , the releasing it . As the picture display

8 Pre-loaded Applications



Phone

Dialing to voice call



Message

Sending, Reading, and Texting Message



Contacts

Searching contact



Clock

Use as alarm clock with scheduled alarms.















Market

Downloaded applications quickly & easily.



Browser

Access the Internet and “surf the web” whenever desired.

	Calendar	Calendar with ability to set events.
	Sound recorder	For recording your voices
	Camera	Capture image of the screen.
	Calculator	Do calculation.
	Email	Send/Receive email using your existing email addresses.
	Explorer	Explorer application for viewing and managing files and apps. Use to install Android apps, and to backup files to your SD card.
	Music	Play and manage audio files.
	Video Player	Play and manage video files.
	Gallery	View and manage photo files.
	Google Search	For searching information on web quickly
	Gmail	For sending and receiving mails by Gmail server
	Maps	For discovering the world with street and satellite data from the Google Earth
	Navigation	For getting directions, finding your location
	Places	A shortcut for finding places using Navigation service



Latitude

Sharing your location through the Google Latitude user location service



Settings

Multiple settings for personalizing and enhancing your Device.



ApkInstaller


Used for installation the android application in SD card or Nandflash the android application



Qianxun Player

You can watch the video source online

☆ To move an icon to the **Desktop** screen, touch & hold on the icon, and then release it when it appears on the **Desktop** screen.


☆ Touch, hold and slide icons onto  to remove them from the **Desktop** screen.



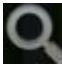



°

9 Desktop menu functions

On the desktop , tap the  to display menu.



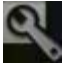

 Add	<p>In desktop screen visible part that allowed only 16 icons ,In order to add more items , Around with your fingers sliding screen can see more space available, and then click add icon. If the screen desktop has shown that full, then increase icon will show for gray, do not use.</p>	
	shortcut	<p>Add in the desktop shortcut application, setting, and bookmark.</p> <p>☆ If you choose to have shortcut on the desktop is in the item, so they will be reproduced, that have the same multiple icon produce</p>
	Widgets	<p>Analog clock: Add a circular analog clock.</p> <p>Calendar: Adding a calendar small tools, show the current date and time.</p>
	Folders	<p>New folder create a new folder</p>

	Wallpapers	Set Wallpaper
 Manage apps	Manage apps	Used to check all the application on the current device, click a program can be unloaded, mobile installation position, etc
 Wallpaper		Select Wallpaper from Gallery,Liver Wallpapers or Wallpapers
 Search		Do search Tap input item→ input what you want to seatch→  tap
 Launcher Setting		Set the Launcher
 Setting		See behind "Settings" section

10 Application Management

Install Android Applications


Purchased or free Android applications that you have downloaded to your computer can be installed quickly & easily on your Tablet using the  **ApkInstaller** application.

1. Copy the **.apk** files that you want to install onto a SD card or USB device, → insert or connect to your Device.
2. Tap the  **ApkInstaller** application icon.
3. Tap **Install** and locate the folder (**Internal Memory** or **TF Card**) in which the .apk application files were saved.
4. Tap on a **.apk** file → **Install**.
The application is installed and the application icon is added to the **Applications** screen.
5. Tap **Open** to launch the application now, or tap **Done** to return to the **ApkInstaller**

screen.

Download Android Applications direct from a Website

You can download Android applications directly from websites, and then quickly and easily install them on your device.

1. Tap the  **Web** application icon to launch the internet browser.
2. Enter the desired website URL, and tap the **download** link for the application you want to install on your device.
3. After the download is complete, touch & hold on the download file (in the **Download history** screen), → tap **Open** → **Install**.

Download Android Applications direct from APP Market


Please refer to Chapter 14 “**APP Market**”

Uninstalling Android Applications

You can also quickly and easily uninstall the Android applications that you have installed.


1. Press **Menu** → **Settings** → **Applications** → **Manage applications**.
2. Tap the application you want to uninstall, → **Uninstall**.
3. Tap **OK** to confirm the Uninstall.

 
You can also use **ApkInstaller** to uninstall the Android applications

1. Tap the  **ApkInstaller** application icon.
2. Tap **Manage**
3. Tap one **.apk** from the application list and tap **Uninstall**
4. Tap **OK** to confirm to uninstall the **.apk**



11 Phone

Press the phone icon , as

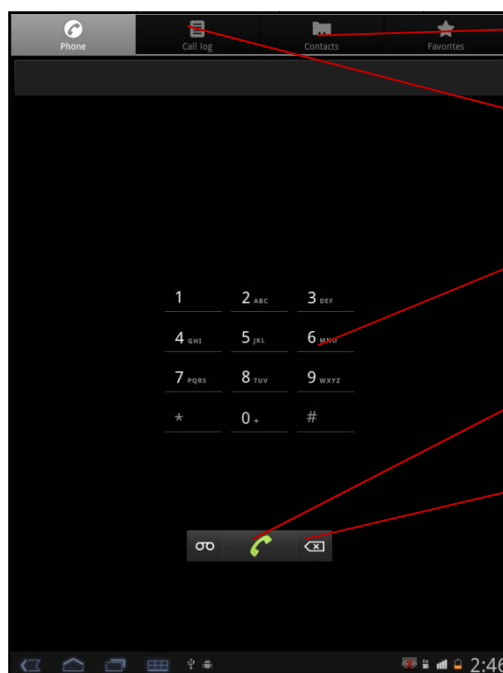

Make the phone calls by contacts

Check call records

Dialing phone numbers

Get through

Delete number



12 Message

1 Open my message

Press the message icon on the screen.

This operation will open "message" window, you can create new message or open the chat which is ongoing.

2 Send message

Pressing "New message" to compose new message.

Input the phone numbers in the column.

When you enter mobile phone number on the screen to match that of the contact. At this time, you can touch the right advice, also can continue to input cell phone number.

You can also enter already entities of the mobile phone number the contact's name.

Touch input box to start writing text messages



13 Contacts

1 Open the address book to add, check and contact your friends and acquaintances

Touch screen or Lord of the starter address book icon.

You can also use "fast contact" open "contact".

All your contacts in the alphabetical order will be displayed in rolling list. Contact each behind attached

The default telephone number.

If you are not add any contact, then the "contact" will show a letter

Interest rates, hints you how to start to their own mobile phone add contact

2 check of contacts

Open the "contact".

You want to see the details of the touch of the contact.

The contact of all kinds of contact will show the appropriate details behind.

 
3 add contacts

You can add contacts on mobile phones, and with Google account, Microsoft Exchange ActiveSync account or support the accounts in other contact synchronization correspondent synchronization.

If you give not in the "contact" listed in some email addresses to send reply E-mail or forwarding mail.

the system will this email address add contact. The "contact" will attempt to put a new address and

Existing contact merged into one entry. You can also manually management of the process.

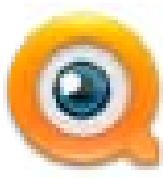

14 Qianxun Player

Press  icon.

The first time you open News and Weather, the below page is displayed



Search the video you like.




15 CLOCK


Alarm

You can use your device as an alarm clock by setting multiple alarms.

- **Add Alarm**

1. Tap the  **Clock** application icon.
2. Press Menu key → **Add alarm**.
3. Set up your alarm as desired.
4. Tap **Turn on alarm** to activate the alarm.
5. Tap **Done** or tap **Revert** to reset your alarm again.

Note:

- This clock icon  displayed at the top of screens indicates that one or more alarms have been set and are active.



- **Shut Off Alarm Alert**

When a scheduled alarm is activated, a pop-up window with the alarm title appears.


1. Tap **Snooze** if you want to be reminded again in 10 minutes.
2. Tap **Dismiss** to cancel the alert.

- **Turn Alarm on**


On alarms that you have set to repeat, you may want to temporarily turn on alarms rather than delete them.

1. In the Alarm screen, tap  on the alarm(s) you want to turn on.
2. Tap  to turn on again.

- **Edit Alarm**

1. Tap the  **Clock** application icon.
2. Press Menu key → **Alarms**
3. Tap on the alarm you want to edit, → make desired edits.



- **Delete Alarm**

1. Tap the  **Clock** application icon.
2. Press Menu key → **Alarms**
3. Tap on the alarm you want to delete.
4. Tap **Delete** to delete the clock.




View slide show

You can view your pictures which are stored in your SD card by slide

1. Tap the  **Clock** application icon.
2. Tap the slide show icon  on the bottom of the screen.
3. Press Back key to end the slide show.

Play music

1. Tap the  **Clock** application icon.


2. Tap the “Music” icon  on the bottom of the clock.
System can open the music application, Choose the music you want to play.






16 MARKET

The App Market has many applications that you can quickly and easily download to your MID. Before using **APP Market**, you have to make sure your device has an internet connection (Please refer to **Chapter 25 Wi-Fi**)

Download Applications

1. Tap the  **App Market** application icon and tap **Accept** on the bottom of the screen.

Note:

- *The first time, you are prompted for your App Market login information. If you have not yet registered an account, tap **Register**.
Otherwise, tap **Login** and enter your login information and then tap **Login** again.*
2. You can select applications from the default **Featured** group, or tab **Apps/Games** on bottom of the screen on the left to choose from the application list by categories, or you can also search applications by name by tapping the icon .
 3. Tap any application you want to download, → **FREE** → **OK**.
When download process started, the icon  will be displayed on the status bar.
When the icon  is displayed on the status bar, the app is downloaded successfully.
 4. Slide down the status bar and tap the “**Successfully installed**” → tap **Open** to launch it now or tap **Uninstall**.
 5. Press Back key to return to the market screen to download other applications

App Market Function Menu

Press Menu key to display the App Market **Function Menu**.

- **Search**
Tap to enter the keys of the application you want to search.
- **My Apps**

This page displays the apps installed on your device that can be also found in the APP Market

Uninstall apps (With **Installed** displayed on right of the item)

1. Tap the app you want to uninstall.
2. Tap **Uninstall**.
3. Tap “OK” when display a dialog.

Update apps (For **FREE** displayed on right of the item)

1. Tap the app you want to update
2. Tap **FREE** → **OK**

- **Settings**

You can see some settings, such as: **Filtering level** and **Notifications settings**.

Filtering level Set the filtering rules as desired

Notifications Set whether a notification prompt when application is downloaded.

- **Help**

If you have some doubts, please refer to this part.

o

 


17 BROWSER

Using Browser to surf the web.


Opening Browser

Tap the browser icon on the Home screen , and then you can open the Web browser.

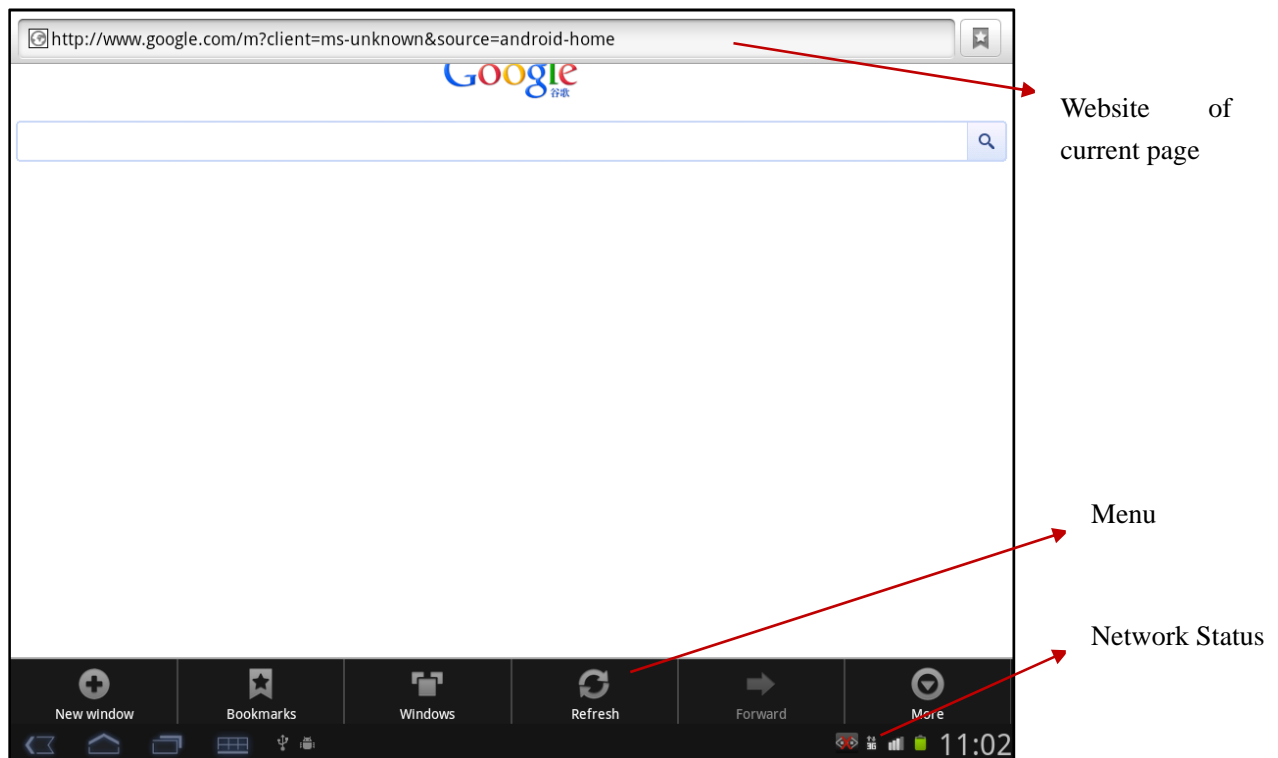

You can browse the web by 3G Wi-Fi or Ethernet.

 Web touch tips Zoom & magnify

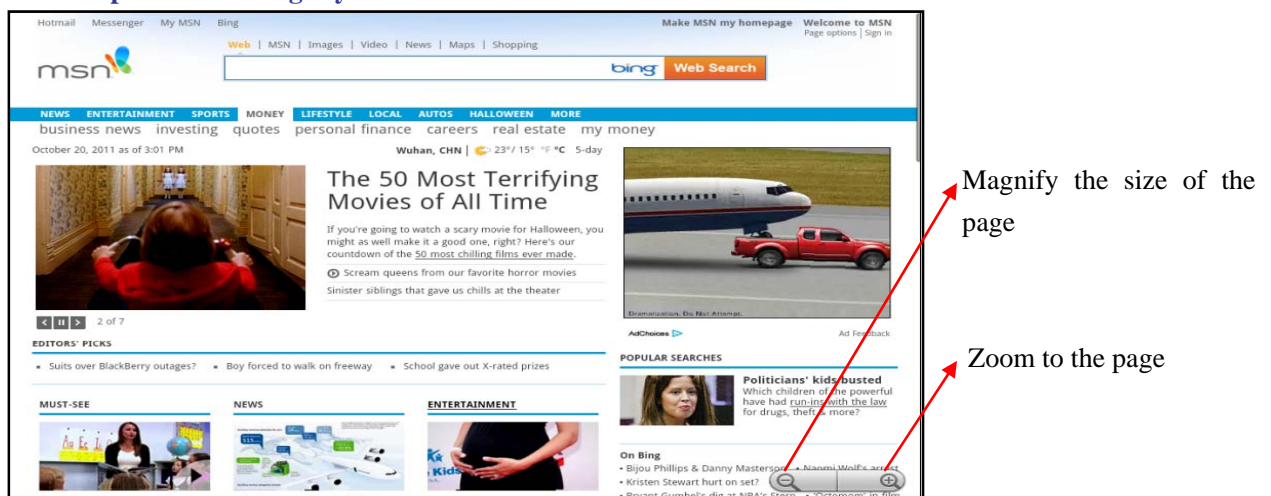

Browser options

Press Menu key to see browser options:

Options	
Open	Open a new browser window.
Bookmarks	See your bookmarks.
Windows	View the browser windows that are currently open.
Refresh	Refresh the current page.
Back/Forward	Navigate to previously viewed pages.
More	Shows additional browser options.



18 CALENDAR

 
Tap the  **Calendar** application icon.

For the first time using the **Calendar**, you need to add an **Exchange account** or a **Gmail account**. Enter the account address and password information, click **Next** and follow the prompts to complete the account configuration. Then you can use the **Calendar**.

Open Calendar


Events from each account you've added to your device and configured to synchronize calendars is displayed in **Calendar**. There are different views you can choose in **Calendar** by pressing Menu key and touch **Agenda View**, **Day View**, **Month View**, **Week View**.

Agenda View

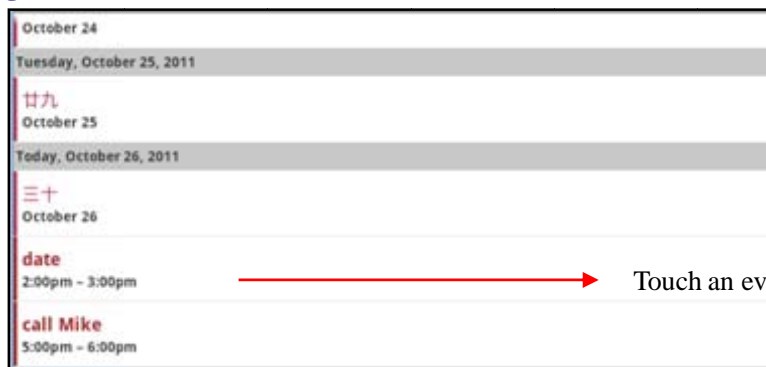

Touch an event to view its details

 
Day View

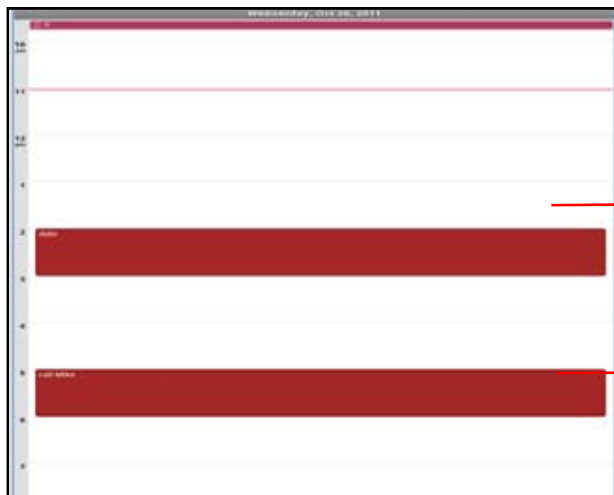

Swipe left or right to view earlier or later days

Touch an event to view its details

 
Week View

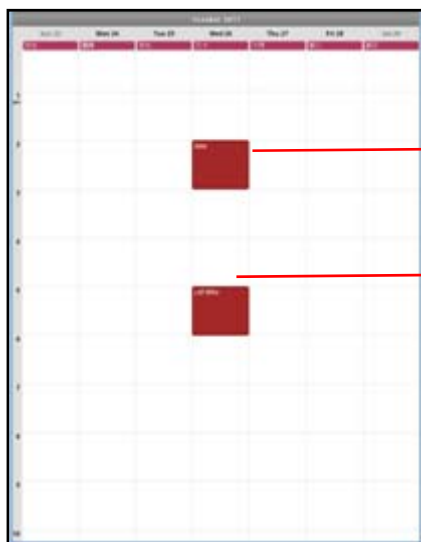

Touch & hold a time slot or event to create a new event at that time

Touch an event to view its details

 Month View

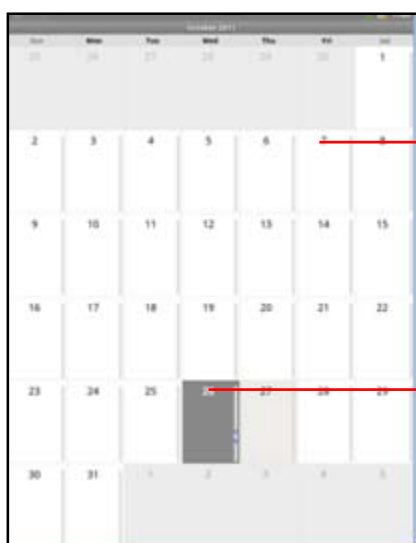

Drag up or down to view earlier or later months

Touch an event to view its details

Creating an Event

1. In any view of **Calendar** , press Menu key -> **More** -> **New event** .
2. Add details about the event
3. Press Menu and touch **Show extra options** to add details about the event
4. Scroll to the bottom of the event details screen and tap **Done**.

Edit /Delete/View an Event

To edit an event, touch and hold the event, then touch **Edit event**. Edit event details, then when you're done, touch **Done**.

To delete an event, touch and hold the event, then touch **Delete event**.



To view an event, touch and hold the event, then touch **View event**.



19 CAMERA

Tap the  Camera application icon.

Take Pictures

1. In **Camera** → tap  to take the picture.
2. The picture will be saved automatically.
3. Tap the picture thumbnail on the up right corner  to enter **Gallery** to scan the picture.
4. Press **Back** to the **Camera**.
5. Press **Back** to exit the **Camera** and back to the **Home screen**.

Take Videos







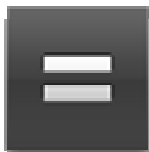 
1. Tap  switch to video, and you can take videos.
2. Tap  to begin and tap  to stop.
3. The video will be saved.
4. Tap the video thumbnail  to play the video.
5. Press **Back** to the **Camera**.
6. Tap  switch back to camera.
7. Press **Back** to exit the **Camera** and back to the **Home screen**.


Photo options


On the preview of the camera, you can see some icons on the right of the preview such as , touch it you can open the settings.

Options	
Scene mode	Select a setting for better image capture under different lighting environments: Auto, Night.
Picture quality	Choose from Fine, Super fine, and Normal.
Color effect	Apply different color effects on image. Choose Sepia, Mono, Negative, Red Tint, Blue Tint, or Green Tint to apply tints to the image.
Camera settings	Choose it can restore defaults.
Store location	Save the latitude and longitude of where the device was taken so the photo can be displayed on Google Maps or used in other applications.
White balance	Compensate for color differences in different lighting.



20 CALCULATOR

 1. Tap the  Calculator application icon on home screen to launch it.
2. Tap the numbers and sign of operation to do the calculation.
3. Tap **CLEAR** to clear the result one by one, tap and hold **CLEAR** to clear all.

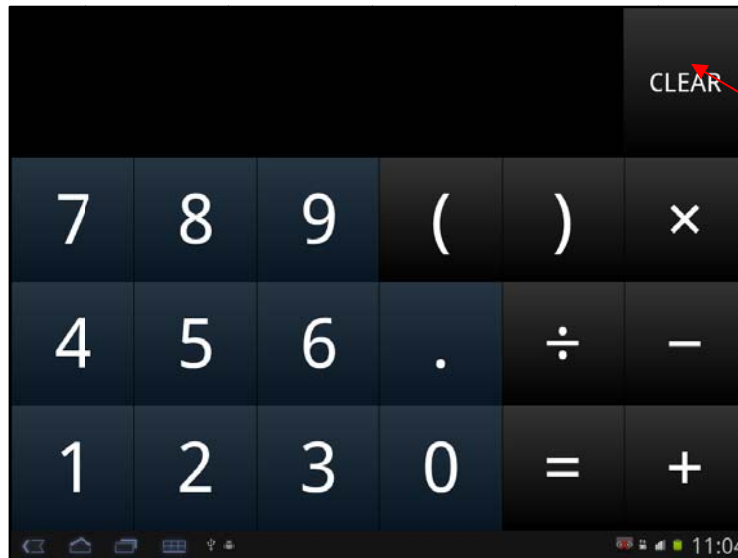

tap and hold to clear all that is entered.




21 EMAIL

POP3 and SMTP accounts are supported.

Add Email accounts


You can enter one or more personal email addresses that you would like to access through your Tablet.

1. Tap the  **Email** application icon.
2. On the **Your Accounts** screen, tap **Next**.
3. Tap in the **Email** address entry field, → enter your email address.
4. Tap in the **Password** entry field, → enter your email password.
5. Tap **Done**.
6. **Manual Setup** (optional): The server settings are automatically populated based on your email account provider (i.e., *gmail.com*, etc). However, if you need to change the server settings tap **Manual Setup** and make necessary changes.
7. Tap **Next**.
8. Optional: Enter a name for the account.
9. Enter name for outgoing message, → tap **Done**.

Note:

- After setup, if you are unable to connect to a free email account, check with your email provider to make sure their servers support free accounts on Post Office Protocol (POP) or Simple Mail Transfer Protocol (SMTP).

Email Inbox

1. Tap the  **Email** application icon.
2. If you set up only one email account, it opens immediately. If you set up multiple accounts, they are listed in the **Accounts** screen.
3. Tap on the desired email account, → tap **Inbox**.


● Open Email Message

1. On the **Inbox** screen, tap on an email to open it.
2. For attachments, tap **Open** to launch appropriate application, or tap **Save** to save attachment to a SD card.
3. To replay, tap **Reply** or **Reply all**.
 - a. Tap in the Compose Mail entry field to enter your reply message.
 - b. Tap **Send** to send immediately, **Save as draft** to save without send or **Discard** to discard without saving or sending.
4. To delete the email immediately, tap **Delete**.

● Compose New Email Message


1. On the Inbox screen, press Menu key → **Compose**.
2. Tap in the **To** entry field and then enter the recipient's email address.
3. Optionally, if you want to add Cc or Bcc recipients, press Menu key → **Add Cc/Bcc**, and then enter the recipient's email address.
4. Tap in the **Subject** entry field to enter your desired subject title.
5. Tap in the **Compose Mail** area to enter your personal message.
6. If desired, press Menu key → **Add Attachment** to attach a file.
7. When ready to send the email, tap **Send** button or press Menu key → **Send**.

Edit Email Account

1. Tap the  Email application icon.
2. On the Inbox screen, press Menu key → **Account settings**.
3. Set your desired preferences to customize your email account.
4. press Back key to return to the Inbox screen.


Delete Email Accounts

If you have multiple accounts, and you delete the account designated as the default account, the next email listed is automatically set as the default.

1. Tap the  **Email** application icon.
2. On the **Inbox** screen, press Menu key → **Accounts**.
3. Touch & hold on the account you want to delete.
4. In the pop-up **Account options** window, tap **Remove account**.
5. Tap **OK** to confirm the deletion.

Set Default Email Account


You must always have one account designated as the default account, so if you have multiple email accounts, you can select any one as the default.

 
1. Tap the  **Email** application icon.
2. On the Inbox screen, press Menu key → **Account Settings**.
3. Tap **Default Account** to select it.

If you delete the account that was designated as the default account, the next email listed is automatically designated as the default.



22 EXPLORER

Tap the  **File Browser** application icon to view the files on all storage devices (*Internal memory, SD card, USB*), and to quickly & easily install Android application on your Tablet.

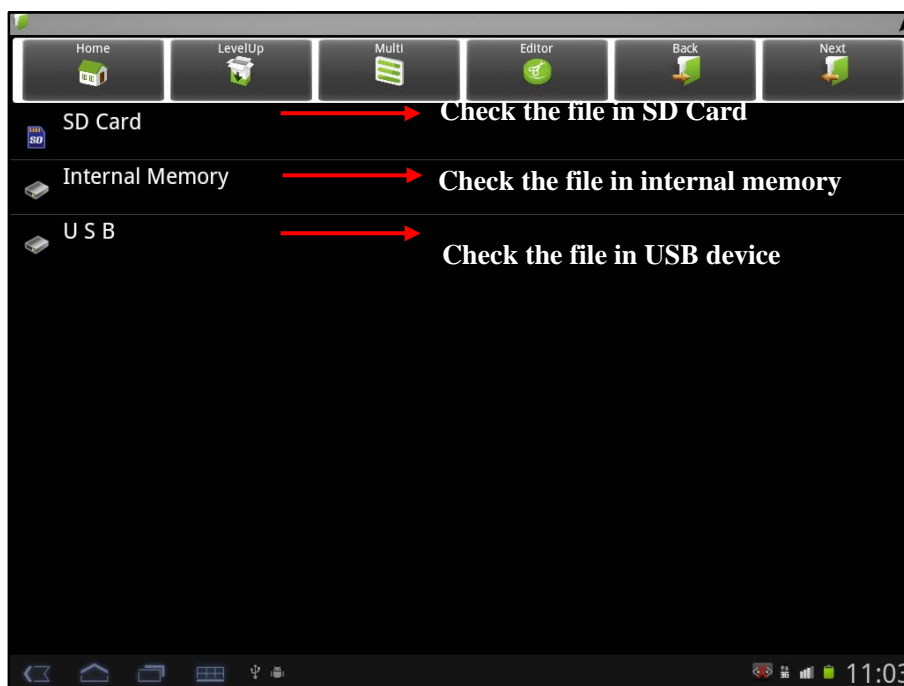

Functions of icons introduction



Display the root directory of Explorer



 
Go the parent directory of the current folder




Tap it once, you can multi select the items displayed



Tap it to do some operation for the selected item, such as copy, delete, move, paste, rename.

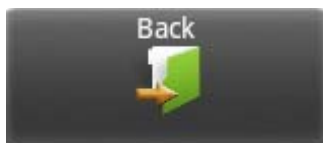

Tap it to go to the previous page

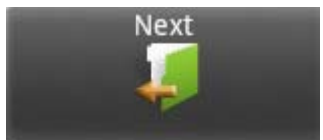 


Tap it to go to the next page

Delete files

Tap and hold on the folder/file you want to delete, → tap **Delete**

Install android application

Using Explorer to install android application. Before doing this please copy the **.apk** files into SD card or your internal memory.

1. Tap the  **File Browser** application icon to view the files
2. Tap one **.apk** that you want to install on your devices




23 MY MUSIC



Get music

● Transfer music using USB

Transfer music files from a computer to your memory card.

1. With a memory card inserted, and your tablet showing the home screen, connect a USB data cable from you tablet micro USB port to a USB port on you computer. Your tablet should show  in the status bar.
2. Your tablet shows a **USB connection** dialog, at the top of the screen, Flik down, then touch USB connection, You can't use the files on you memory card while it is connected.
3. Touch **Turn on USB storage**.
4. Tap "OK" to confirm the dialog.
5. Drag and drop you music to a folder on the memory card.
6. When you're done, select the "**Turn off USB storage**".

Play Music

1. Tap the  **My Music** application icon.
2. Tap any audio file from Albums/Artists/Songs/Playlists/ to play it.
3. To stop the music, tap the **Pause**  icon.
4. To leave the music playing and return to previous screens, press Back key to return to the **Home** screen.



At this interface, you can do: **view the lyrics, play / pause, switch to the previous / next song, loop play, random play** etc.

The Operation with Music and Playlist

● Add to playlist

You can add it to a playlist. Following the steps below:

1. On the media file list view tap and hold on any file and tap **Add to playlist**
2. On playing music view press Menu key → **Add to playlist**.

- **Rename or Delete playlist**

Tap and hold in the playlist(such as: New playlist 1). → tap **Rename** or **Delete**.


- **Delete music**

 
When a song is playing, you can deleted by pressing Menu key >**Delete**



24 我的视频

Play Video

1. Tap the  **My Video** application icon.
2. Touch any video from the video list.
3. Tap on the playing video screen, the options displayed on the screen below.

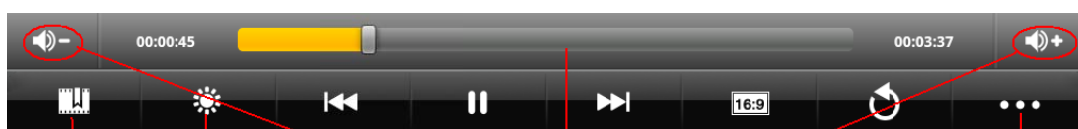

Add to bookmark	Modify the backlight	Volume -	Quick media play course	Volume +	Other options
-----------------	----------------------	----------	-------------------------	----------	---------------

Add to bookmark

Touch to record the current play course during a video is playing. Next time you open this video, you can choose to play from the bookmark or from the very beginning.

Other options

- **Delete BookMark And Play from beginning**

During playing a video which has been added a bookmark touch it and the video will

play from the beginning.

- **Delete bookmark**

During playing a video which has been added a bookmark touch it and the bookmark added to it will be deleted.

- **Play mode**

During playing a video, touch **play mode** you can choose:

Single After the current video is over, the playing is stopped.

Repeat one The current video will be played in repetition.

Repeat all All the videos will be played in repetition.


- **Help** Show some help information about the video player

- **Return** Back to the playing video view



25 GALLERY

Opening Gallery and viewing your albums

1. Touch the Gallery icon  in the Launcher or on the Home screen
OR
2. Open Gallery from Camera by touching the thumbnail image at the top right
OR
3. Open Gallery from **Camera** by pressing Menu and touching **Gallery**..

Note:

- If you have a great many pictures or videos on your SD card or USB storage, it may take Gallery a few minutes when you open it to discover and organize them.

Working with albums

- **Open Gallery and touch the album whose contents you want to view**

Albums open displaying the pictures and videos they contain in a chronologically ordered grid. The name of the album is shown at the top of the screen. You can touch a picture or video to view it

- **Share an album**

You can share the entire contents of one or more albums. You can also share individual images or videos from an album

1. Open the main Gallery Window
2. Press Menu twice
3. Check or uncheck the albums you want to share
4. Touch **Share** at the bottom of the screen.

- **Get the details of an album**

1. Open the main Gallery window
2. Press Menu twice
3. Check or uncheck the albums you want details about
4. Touch More at the bottom of the screen

- **Delete an album**

1. Open the main Gallery window
2. Press Menu twice
3. Check or uncheck the albums you want details about
4. Touch **Delete** at the bottom of the screen

Working with pictures

- **View and browse pictures**

Open Gallery album and touch a picture

- **Watch a slideshow of your pictures**

1. Open Gallery album and touch a picture
2. Touch on the picture to see the controls of the picture. You can see “Slideshow” on the bottom of the screen. Touch it to see pictures in a slideshow

- **Rotate/Crop/Share/Delete a picture**

1. Open Gallery album and touch a picture
2. Press **Menu** and you will see **Share/Delete/More** on the bottom of the screen.
Touch **More->Crop** to crop the picture
Touch **More->Rotate left/Rotate right** to rotate the picture

- **Get details about a picture**

1. Open Gallery album and touch a picture
2. Press **Menu** and you will see **Share/Delete/More** on the bottom of the screen.
3. Touch **More->Details** to get more information about the picture

- **Set the picture as wallpaper**

1. Open Gallery album and touch a picture
2. Press **Menu** and you will see **Share/Delete/More** on the bottom of the screen.
3. Touch **More->Set as**
4. Touch the yellow line to drag large or small as you want and then press **Save**.

Working with videos

Use gallery to play videos

- **Play videos**

Open a Gallery album and touch a video. In the dialog press **Movies** to play the video.

- **Share/Delete/Detail videos**

1. Open Gallery album and touch a video
2. Press **Menu** and you will see **Share/Delete/More** on the bottom of the screen.
Touch **More**->**Details** to get the details of the video

26 ACCOUNTS

Adding and removing accounts

- **Add an account**

1. Open the Accounts & Sync Settings screen:
Press **Menu**-> **Settings** -> **Accounts & Sync**
2. Touch **Add account** on the bottom of the screen.
3. Touch the kind of account you want to add
4. Follow the steps displayed on the screen to enter the required and optional information about the account.

- **Remove an account**

1. Open the Accounts & Sync Settings screen:
Press **Menu** -> **Settings** -> **Accounts & Sync**
2. Touch the account to delete
3. Touch **Remove account** on the bottom of the screen.
4. Confirm that you want to remove the account

Configuring account sync and display options

- **Configure general sync settings**

1. Open the Accounts & Sync Settings screen:
Press **Menu** -> **Settings** -> **Accounts & Sync**
2. Check or uncheck **Auto-sync** to control whether changes you make to information on the device or on the web are automatically synced with each other.

- **Sync information manually**

1. Open the Accounts & Sync Settings screen:
Press **Menu** -> **Settings** -> **Accounts & Sync**
2. Touch the account whose data you want to sync.

3. Press **Menu** and touch **Sync now** on the bottom of the screen.

- **Change an account's sync settings**

1. Open the Accounts & Sync Settings screen:
Press **Menu -> Settings -> Accounts & Sync**
2. Touch the account whose sync settings you want to change
3. Check or uncheck the kinds of information you want to sync to the device.



27 Gmail

Opening Gmail and your Inbox

- **Open Gmail**

Touch Gmail icon  on the Home screen or in the Launcher.

When you open Gmail, the current Google Account is displayed at the top of the Inbox.

If you have more than one account, you touch the current account to switch accounts

- **Open your Inbox when Gmail is running**

1. Press Back until you return to your Inbox

OR

2. When reading a message press Menu and touch **Go to Inbox**.

OR

3. When viewing a list of labeled conversations press **Menu** and touch **More->Go to Inbox**

 
- **Switching accounts**

Gmail displays conversations, messages, and settings from one Google Account at a time.

If you have more than one account, you can open the Accounts screen to view how many unread messages you have in each account and to switch accounts.

1. From your Inbox, touch the current account at the top right of the screen. Or press **Menu** and touch **Accounts**

Each account is listed, along with the number of unread messages in your Inbox

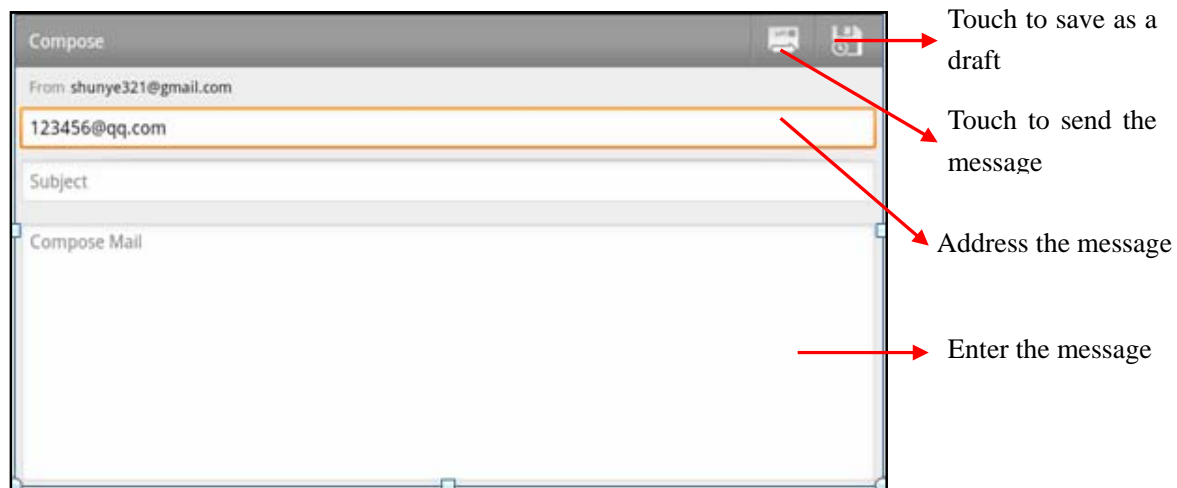

2. Touch the account that contains the email you want to read.

Note: Here we only have one accounts.

- **Read a message**

Touch a conversation that contains the messages you want to read.

The message header shows who sent the message, when, who it was sent to, and other information. Icons indicate whether the message has an attachment and the sender's Google

When reading messages in a conversation, you can use the buttons at the bottom of the screen to archive the entire conversation

Use the left and right arrow buttons at the bottom of a message to open the next or previous conversation in the Inbox.

- **Work with an attachment**

Gmail can display some kinds of attached images (.png, jpeg, depending on your device) in a message. Others have a Preview or Download button you can use. Depending on the applications installed on your device, you may also be able to download and read a variety of kinds of files, including spreadsheets (.xls), word-processing documents (.doc), or PDF files (.pdf). Other applications may add support for opening other kinds of file.


Attachments you download are stored on your device's USB storage or SD card. Image files are added to albums in Gallery.

Composing and sending a message

- **Compose and send a message**

1. When viewing the Inbox, press **Menu** and touch **Compose**





2. Enter all the information that is needed for a message and touch  to send the message.

- **Attach a photo to a message**

1. Press Menu key on the view of composing message and touch **Attach** on bottom of the screen
2. Touch to choose a picture to attach as an attachment for the message

Replying to or forwarding a message

1. Touch the reply icon  on the view of the conversation that you want to reply.
Or touch the arrow  to display the **Forward** icon for forwarding a message.

28 Wi-Fi

Connecting to Wi-Fi networks

1. Press **Menu** -> **Settings** -> **Wireless & network settings** on any screen.
2. Check **Wi-Fi** item on the top of the screen to turn it on
3. Touch a network to connect to it

Note:

- *If the network is open, you are prompted to confirm that you want to connect to that network by touching **Connect**.*
- *If the network is secured, you're prompted to enter a password or other credentials. (Ask your network administrator for details.)*

Receive notifications when open networks are in range

By default, when Wi-Fi is on, you receive notifications in the Status bar when your device detects an open Wi-Fi network.

1. Turn on Wi-Fi, if it's not already on

2. In the Wi-Fi settings screen, check Network notification.
You can uncheck this option to stop receiving notification.

Add a Wi-Fi network

1. Turn on Wi-Fi, if it's not already on.
If you're adding a Wi-Fi network when first setting up your device, Wi-Fi is turned on automatically.
2. In the Wi-Fi settings screen, touch **Add Wi-Fi network** (at the bottom of the list of discovered networks).
3. Enter the SSID (name) of the network. If the network is secured, touch the Security menu and then touch the type of security deployed on the network.
4. Enter any required security credentials.
5. Touch **Save**.
The device connects to the wireless network. Any credentials that you entered are saved, so you are connected automatically the next time you come within range of this network.

Forget a Wi-Fi network

You can make the device forget about the details of a Wi-Fi network that you added—for example, if you don't want the device to connect to it automatically or if it is a network that you no longer use.

1. Turn on Wi-Fi, if it's not already on.
2. In the Wi-Fi settings screen, touch & hold the name of the network.
3. Touch **Forget network** in the dialog that opens.

Wi-Fi Settings screen

In addition to the settings described in this section, you can press **Menu** and Advanced Wi-Fi settings as described in “**Advanced Wi-Fi Settings screen**”

- **Wi-Fi**

Check to turn on Wi-Fi so you can connect to Wi-Fi networks. When connected to a network, displays the network's name.

- **Network notification**

Check to receive a notification when an open Wi-Fi network becomes available.

- **Wi-Fi networks**

Displays a list of Wi-Fi networks you've previously configured and those detected when the device last scanned for Wi-Fi networks.

- **Add Wi-Fi network**

Opens a dialog where you can add a Wi-Fi network by entering its SSID (the name it

broadcasts) and security type.

Advanced Wi-Fi settings screen

- **Wi-Fi sleep policy**

Opens a dialog where you can set whether and when the Wi-Fi radio disconnects. Disabling sleep uses more battery power.

- **MAC address**

The Media Access Control (MAC) address of your device when connecting to Wi-Fi networks.

- **IP address**

The Internet Protocol (IP) address assigned to the device by the Wi-Fi network you are connected to (unless you used the IP settings to assign it a static IP address).

- **IP settings**

If you check **Use static IP**, you can use the IP settings to enter an IP address and other network settings for your device manually, rather than using the DHCP protocol to obtain network settings from the Wi-Fi network itself.

29 HDMI

Turn HDMI Function

In default, the HDMI function is turned on. Press **Menu->Settings->HDMI Settings->Turn on HDMI**.



Use HDMI

1. Tap Video Player icon to open Video Player application
2. Tap any video file you want to watch by HDMI
3. Connect the device and TV with HDMI plug

Note:

- *Before using HDMI, you should make sure that HDMI function is turned on.*

30 Settings

Wireless & networks	Airplane mode	Disable all wireless connection
	Wi-Fi	Turn on Wi-Fi.
	Wi-Fi Settings	Set up & manage wireless access points.
	Tethering&portable hotspot	Share your mid's mobile data connection via USB or a portable Wi-Fi hotspot
	VPN setting	Set up & manage Virtual Private Networks
	Mobile networks	Set options for roaming, networks, APNs
	Ethernet settings	Set up & manage wired Ethernet connection
Call setting	Fixed Dialing Number	Manage Fixed Dialing Numbers
	Voicemail service	My carrier
	Voicemail settings	Setting for my carrier
	Call forwarding	Setting call forwarding
	Additional setting	Setting caller waiting & call waiting
Accounts & sync	General sync settings	Sync accounts settings
	Manage accounts	Accounts management
HDMI Setting	Turn on HDMI	Turn on/off HDMI function
	HDMI Resolution	Set the resolution before using HDMI
	Screen Zoom	Zoom in/out the display of MID on TV
Sound	Silent mode	Silence all sounds except media & alarms.
	volume	To adjust the Media volume, Alarm volume and Notification volume. Tap & slide  and then tap OK .
	Notification ringtone	Select desired ringtone sound.
	Audible selection	Select to enable a sound when making a screen selection.
	Screen lock sounds	Play sounds when locking and unlocking the screen.
Display	Brightness	Tap & slide  to adjust the screen brightness as desired, and then tap OK .
	Auto-rotate screen	When selected, the orientation of the screen switches between Portrait and Landscape automatically when you rotate the device.
	Animation	Set animations on/off for windows display
	Screen timeout	Adjust the delay before the screen automatically turns off.
Location & Security	Use wireless networks	Set using wireless network to locate
	Set up screen lock	Lock screen with a pattern, PIN, or password.
	Visible passwords	Show password as you type.
	Select device administrators	Add or remove device administrators.
	Use secure	Allow applications to access secure certificates and other

	credential	credentials.
	Install from SD card	Install encrypted certificates from SD card.
	Set password	Set or change the credential storage password.
	Clear storage	Clear credential storage of all contents and reset its password.
Applications	Unknown sources	Allow installation of non-Market applications.
	Manage applications	Manage and remove installed applications.
	Running services	View and control currently running services.
	Development	Set options for application development.
Privacy	Factory data reset	<p>Tap to reset the device to its initial factory state, erasing all data and downloaded applications. Tap Reset Mid to proceed with reset, or press Back key to cancel and return to previous screen.</p> <p>WARNING! The following will be erased during the factory reset:</p> <ul style="list-style-type: none"> ~ Google account ~ System and application data and settings ~ Downloaded applications <p>The factory reset will NOT erase:</p> <ul style="list-style-type: none"> ~ Current system software and bundled applications ~ SD card files, such as music or photos
Language & keyboard	Select language	Select the language and region according to your location.
	User dictionary	You can add words to a personal dictionary, words that may not be included in the default dictionary.
Date & time	Automatic	Use network-provided values
	Set date	Set the date manually when Automatic is not checked
	Select time zone	Select the time zone when Automatic is not checked
	Set time	Set the time when Automatic is not checked
	Use 24-hour format	You can choose to use 24-hour format or 12-hour format.
	Select date format	You can select the date format.
About Mid		View Status (Battery, Wi-Fi, etc), Battery use, Legal information, Model number, Android version, Kernel version and Build number.